



Decking Installation Guide

7.28.25 US



CONTENTS

Important Note	2 - 6
Expansion and Contraction Values	7
Locking Clip Installation	8 - 9
Butt Joint Installation	10
Breaker Board Installation	11 - 12
Stair Tread Installation	13
Decking Installation	14 - 16
Fascia Board Installation	17
Removing a Board	18 - 19

IMPORTANT:
Read All Sections Before You Start

For the most up to date information, please visit our website @ www.newtechwood.com

Prior to installing any composite decking, it is recommended that you check with local building codes for any special requirements or restrictions. The diagrams and instructions outlined in this guide are for illustration purposes only and are not meant or implied to replace a licensed professional. Any construction or use of NewTechWood must be in accordance with all local zoning and/or building codes. The consumer assumes all risks and liability associated with the construction and use of this product.

Safety

When dealing with any type of construction project, it is necessary to wear appropriate safety equipment to avoid any risk of injuries. NewTechWood recommends but is not limited to the following safety equipment when handling, cutting, and installing NewTechWood: gloves, a respiratory protection, long sleeves, pants, and safety glasses.

Tools

Standard woodworking tools may be used. It is recommended that all blades have a carbide tip. Standard stainless steel or acceptable coated deck screws are recommended.

Environment

A clean, smooth, flat, and strong surface is needed to install NewTechWood's products correctly. Please check with local building codes before ever installing any type of decking. If installation does not occur immediately, NewTechWood's products need to be put on a flat surface at all times. Never ever should it be put on a surface that is NOT flat.

Planning

Plan a layout for your decking before starting it to ensure the best possible looking decking for your project. Building codes and zoning ordinances generally apply to permanent structures, meaning anything that is anchored to the ground or attached to the house. So nearly every kind of decking requires permits and inspections from a local building department. We recommend drawing out a site plan of your proposed project that you intend to do to minimize errors and make your perfect decking.

Pressure wash on a sample piece of material to make sure that it does not damage the UltraShield coating before using it on the actual installation.

Construction

NewTechWood UltraShield is NOT intended for use as columns, support posts, beams, joist stringers, support against a force, or other primary load-bearing members. NewTechWood must be supported by a code-compliant substructure. While NewTechWood products are great for retrofits, NewTechWood's products CANNOT be installed on existing decking boards.

Static

Static can also be more prevalent in areas that are of higher altitude because the humidity is lower. For

these areas, be careful of using conducive objects such as metal railing and chairs as static shocks might occur more often. A potential way to lower the amount of static shocks occurring is to apply Staticide (www.aclstaticide.com) on your deck or use anti-static mats before doorways. NewTechWood's products have been tested against EN 1815 - Assessment of Static Electrical Propensity and have received values under the maximum standard of 2kV.

Ventilation

NewTechWood products CANNOT be directly installed onto a flat surface. It must be installed onto a substructure that is made into a frame, so there is adequate and unobstructed air flow under the decking to prevent excessive water absorption. If there is excessive water absorption to any area that does not have the protection of the cap layer, there could be some swelling that occurs. A minimum of 4 inches of continuous net free area under the decking surface is required for adequate ventilation on all decking, so air can circulate between adjacent members to promote drainage and drying. In the case that installation is below 4 inches, it is recommended to look up the maximum rainfall of the area to determine what height would need to be built to ensure no flooding of the deck occurs. If the rainfall is determined not to flood the deck, a slope of 1-2% must be used on the frame towards the direction of the drainage to ensure that there is no free standing water. If the deck is built below 4 inches without a slope, the areas without the protection of the cap layer could swell on the ends.

Heat and Fire

Excessive heat on the surface of NewTechWood products from external sources such as but not limited to fire or reflection of sunlight from energy efficient window products. Low-emissivity (Low-E) glass can potentially harm NewTechWood products. Low-E glass is designed to prevent passive heat gain within a structure and can cause unusual heat build-up on exterior surfaces. This extreme elevation of surface temperatures, which exceeds that of normal exposure, can possibly cause NewTechWood products to melt, sag, warp, discolor, increase expansion/contraction, and accelerate weathering.

Current or potential NewTechWood customers that have concerns about possible damage by Low-E glass should contact the manufacturer of the product which contains Low-E glass for a solution to reduce or eliminate the effects of reflected sunlight.

Fasteners

When fastening NewTechWood's products, all screws that are face fastened should always be driven in at a 90 degree angle to the decking surface. Toe screwing should never be done to the products. An extra joist should be added if a 90 degree angle cannot be driven into the board as shown in Diagram 1.

All fasteners should be on their own independent joists, when two boards ends meet each other there must be a sister joist with a minimum of 5 mm between the sister joists for water to go down between the joists. Excessive build of water over long periods of time at the ends could result in swelling. The end of each board must sit on its own joist as shown in Diagram 2.

Use white chalk, straight boards, or string lines as templates for straight lines. NEVER USE COLORED CHALK. Colored chalk will permanently stain NewTechWood's products and are highly not recommended.

All screws that are face fixed should always be stainless steel. When face screwing, always go in at least from the ends and width of the board by 1"1/2 as shown in Diagram 3.

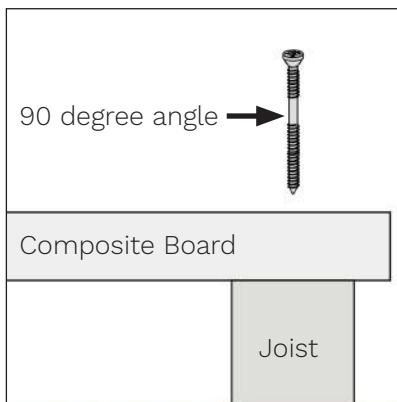


DIAGRAM 1

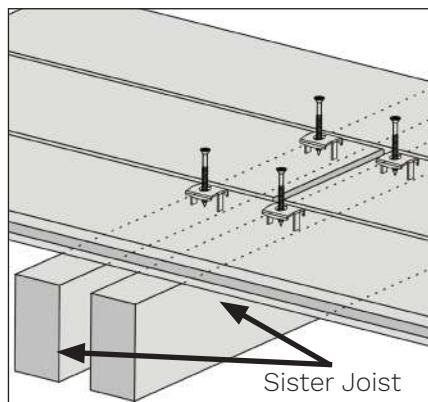


DIAGRAM 2

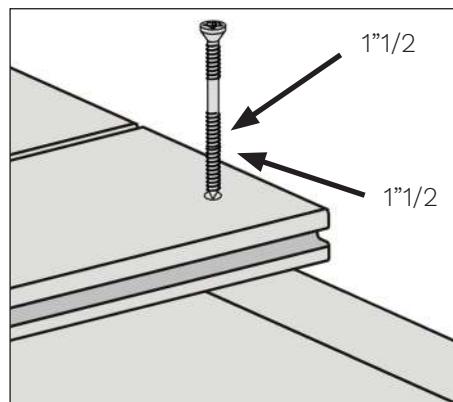


DIAGRAM 3

Fasteners Continued

Always use screws designated for use with composite decking material. Always test the screws on a scrap piece of board to ensure the screws do not cause the surface of the decking to mushroom or bulge around the head of the screw. If it does cause this issue, change to a different brand of screw.

When choosing which screws to use, always check first with your local home centers and hardware stores to see if they have screws that are engineered specifically for composite wood. These screws will always work and give NewTechWood's products the best looking outcome, using other screws that are not recommended for composite could potentially damage/harm the decking. If you are unsure which screw to use, contact your manufacturer for more information.

Recommend screws from other manufacturers: Cap-tor xd screws by Starborn Industries

Acclimate

Acclimating at least 2 days prior to installation is recommended.

Acclimating the boards will get rid of any unwanted shrinkage issues seen during and after installation.

Note: Always remember when allowing the boards to acclimate at the job site it is important to put it on a flat and even surface. If put on an uneven surface there is a possibility that the boards could warp to the shape of the terrain.

Routing

Solid boards can be routed for hidden fasteners to be placed in them as shown in Diagram 4.

Note: Boards should never be routed the entire length.

Fascia boards can also be routed to allow for expansion and contraction.


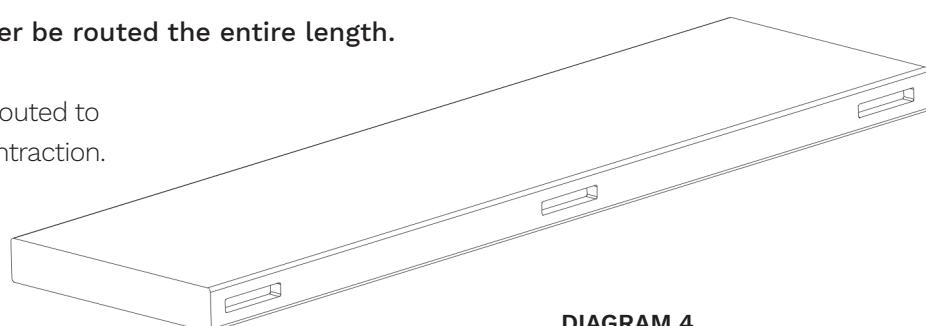



DIAGRAM 4

Storage


NewTechWood's products always need to be stored on flat solid surfaces. Surfaces such as dirt and grass are not sufficient as they can move over time.

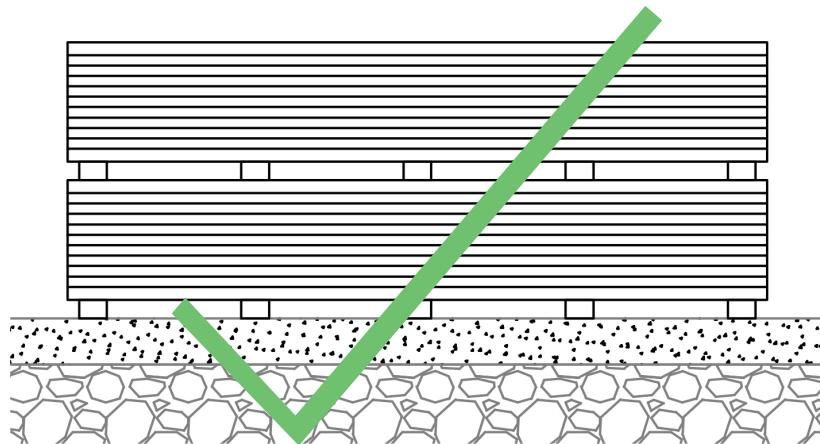

NewTechWood products shown above put on a flat surface on joists, this is the correct way for storage.

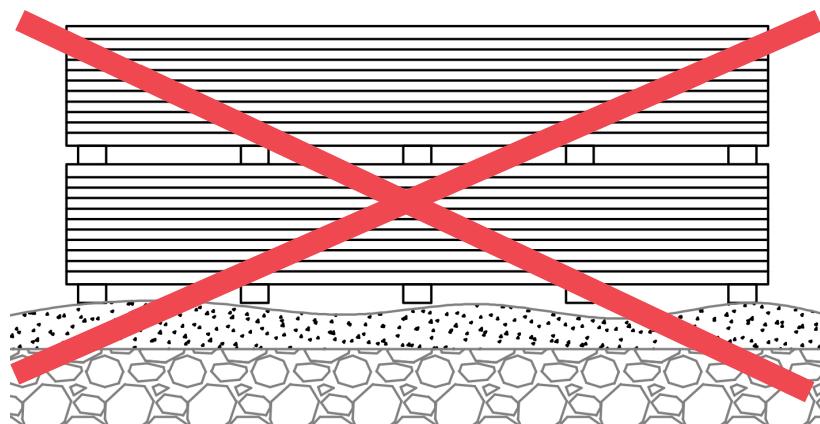

NewTechWood products shown above on an uneven surface which will make the products prone to warping and distortion.

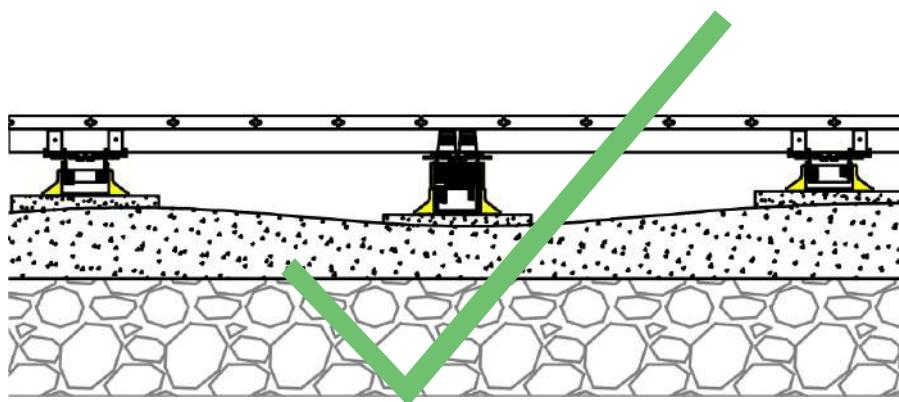

NewTechWood products shown above can be on pedestals or jacks if the surface is uneven. Consult with the pedestal or jack manufacturer before using the product to ensure its compatibility with NewTechWood's products.

Maximum Decking Spans on Center-to-Center

Region	Profile	Dimensions	Residential Span	Commercial Span
North America	US07, Solid Board	5.5 x 0.9 inches	16 inches	12 inches
	US01, US53 Grooved Solid Board	5.5 x 0.9 inches	16 inches	12 inches

Joist Spanning on Center-to-Center with Angled Decking Installations

Degree of Angle	Dimensions	Spacing
90	5.5 x 0.9 inches	Refer to the above tables
60	5.5 x 0.9 inches	2 inches less than the stated above tables
45	5.5 x 0.9 inches	4 inches less than the stated above tables
30	5.5 x 0.9 inches	1/2 the distance stated in the above tables

Expansion and Contraction Values

NewTechWood deck boards will experience expansion and contraction with changes in temperature. Expansion and contraction are most significant where extreme temperature changes occur. Fastening the deck planks according to the gapping requirements noted in the following table accommodates for this movement.

Installation Temperature (Fahrenheit)	Length (Feet)									
	3	8	9	10	12	13	13	16	18	
Gap (in)	32	1/16	1/8	1/8	3/16	3/16	3/16	1/4	1/4	5/16
	41	1/16	1/8	1/8	1/8	3/16	3/16	3/16	1/4	1/4
	50	1/16	1/8	1/8	1/8	1/8	1/8	3/16	3/16	3/16
	59	1/16	1/16	1/16	1/8	1/8	1/8	1/8	3/16	
	68	3/64	1/16	1/16	1/16	1/16	1/16	1/8	1/8	
	77	3/64	1/16	1/16	1/16	1/16	1/16	1/16	1/16	
	86	3/64	3/64	3/64	3/64	3/64	1/16	1/16	1/16	

Note: If you are still unsure of what gapping to use, contact the manufacturer and they will give you the correct gapping requirements based on your environment and area.

Locking Clip Installation

When installing boards one full length across the deck, we recommend locking the board in the middle to allow for even expansion and contraction to take place on both ends as shown in Diagram 5.

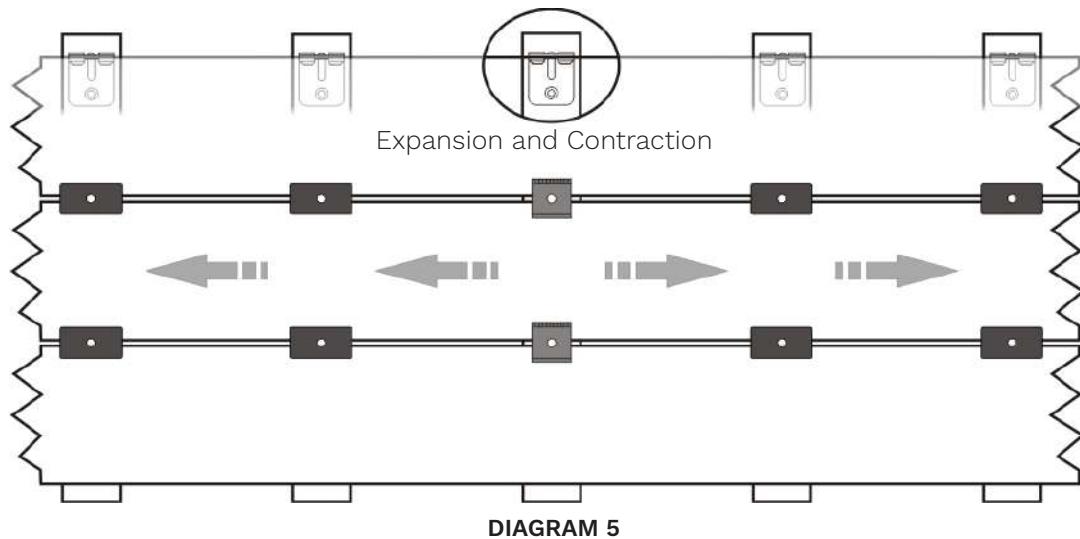


DIAGRAM 5

The below shows the recommended installation methods using breakers boards and picture framing the decking. Locking clips should be placed as close as possible to the middle joist of each board as shown in Diagram 6A and Diagram 6B.

If you plan to install without breaker boards or picture framing in a brick style fashion it is recommended that you contact your local distributor or the manufacturer for further instructions. Installing with a brick style could potentially give large gaps between butt ends due to the products expansion and contraction rates. It could also make the ends of the deck flare or swell if water is not properly drained on the joist specifically at a butt end where sister joists with a gap should be used.

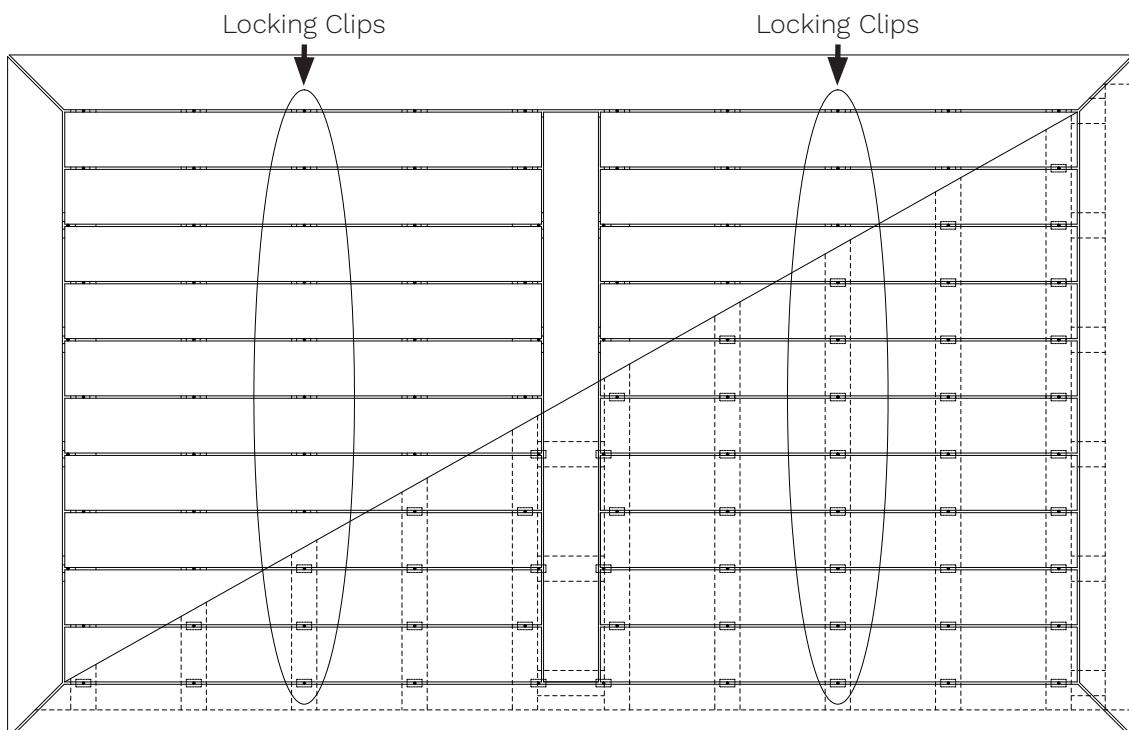


DIAGRAM 6A

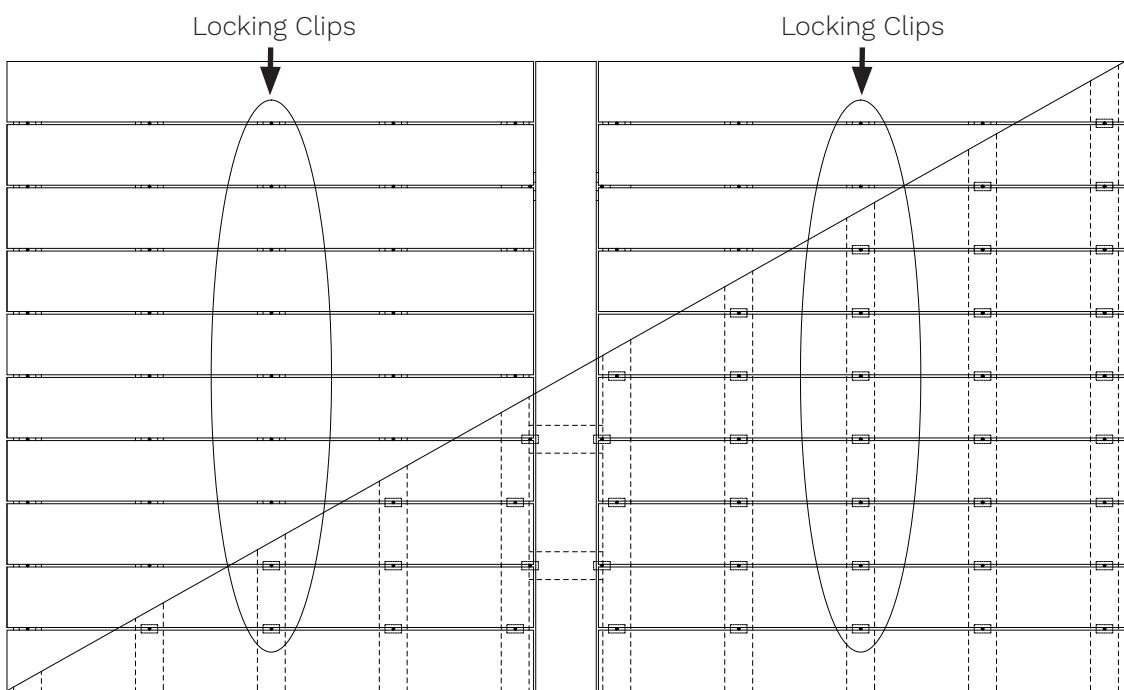


DIAGRAM 6B

Butt Joint Installation

We recommend using sister joist for the butt joint installation to prevent the cutting edge from swelling, as shown in the Diagram 7. If you are using more than one butt joint, we recommend that you install with a breaker board between butt joints.


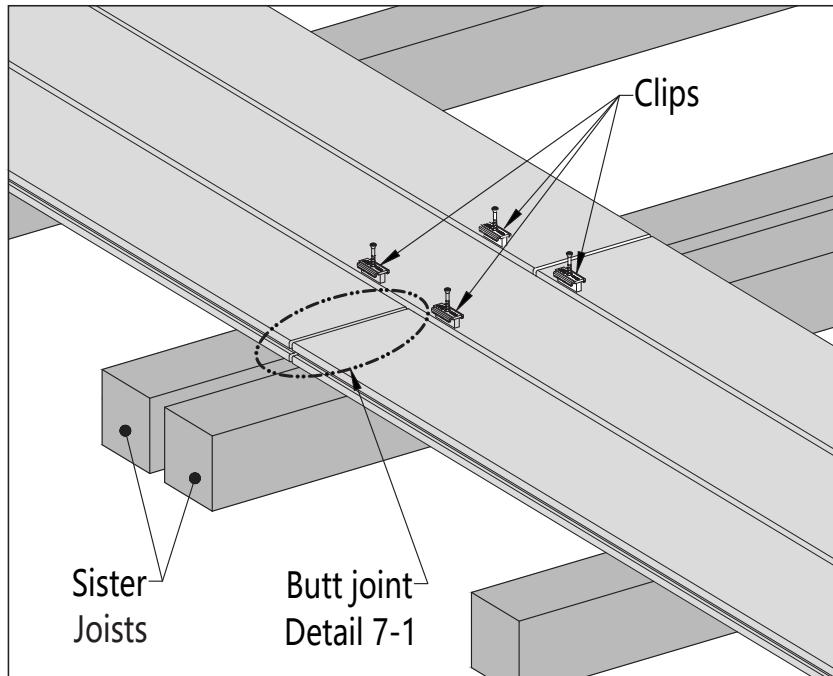


Diagram 7

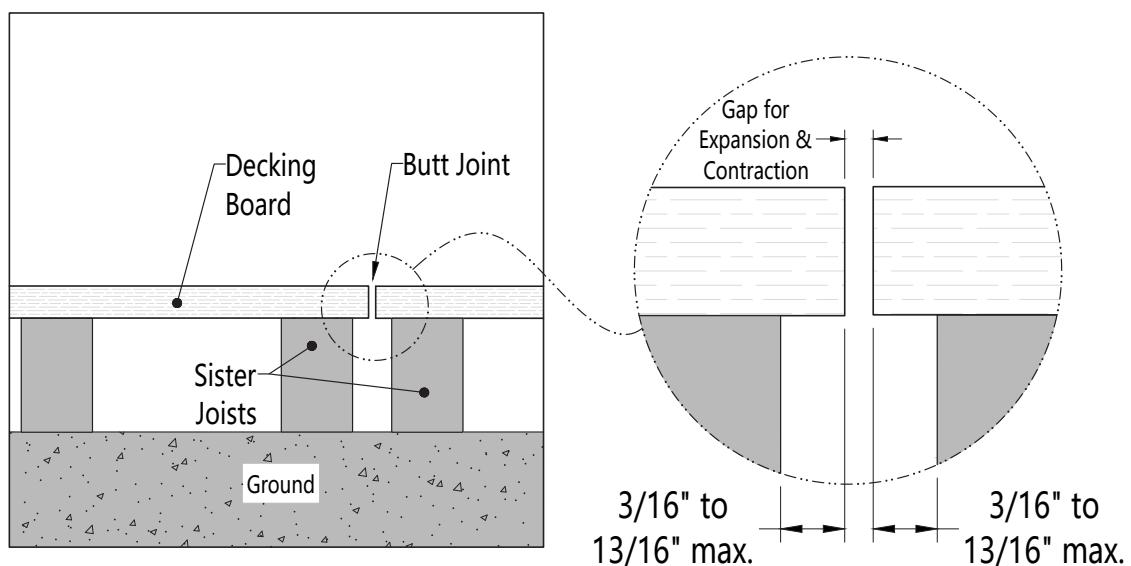

Detail 7-1

Breaker Board Installation

We recommend using breaker boards structure for when there is more than one butt joint.

Diagram 8 framework uses a ladder joist structure where the user is building a frame perpendicular for the board that will be running down it.

Note: Use the T-Clip, TC-17 and TC-27 as a breaker board clip, as shown in Diagram 9.

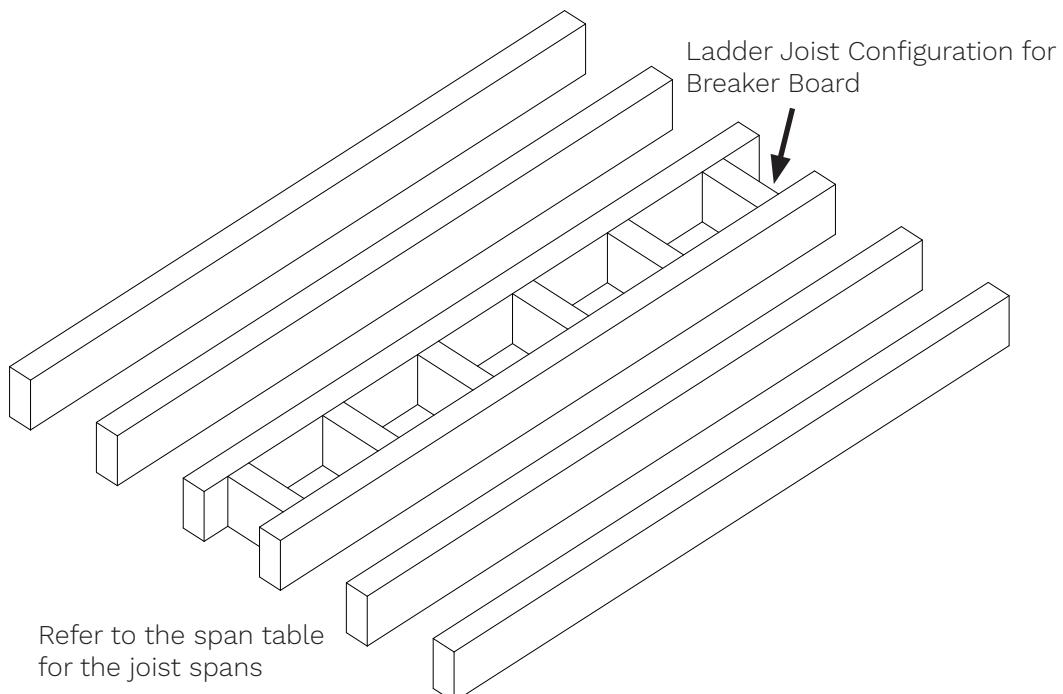


DIAGRAM 8

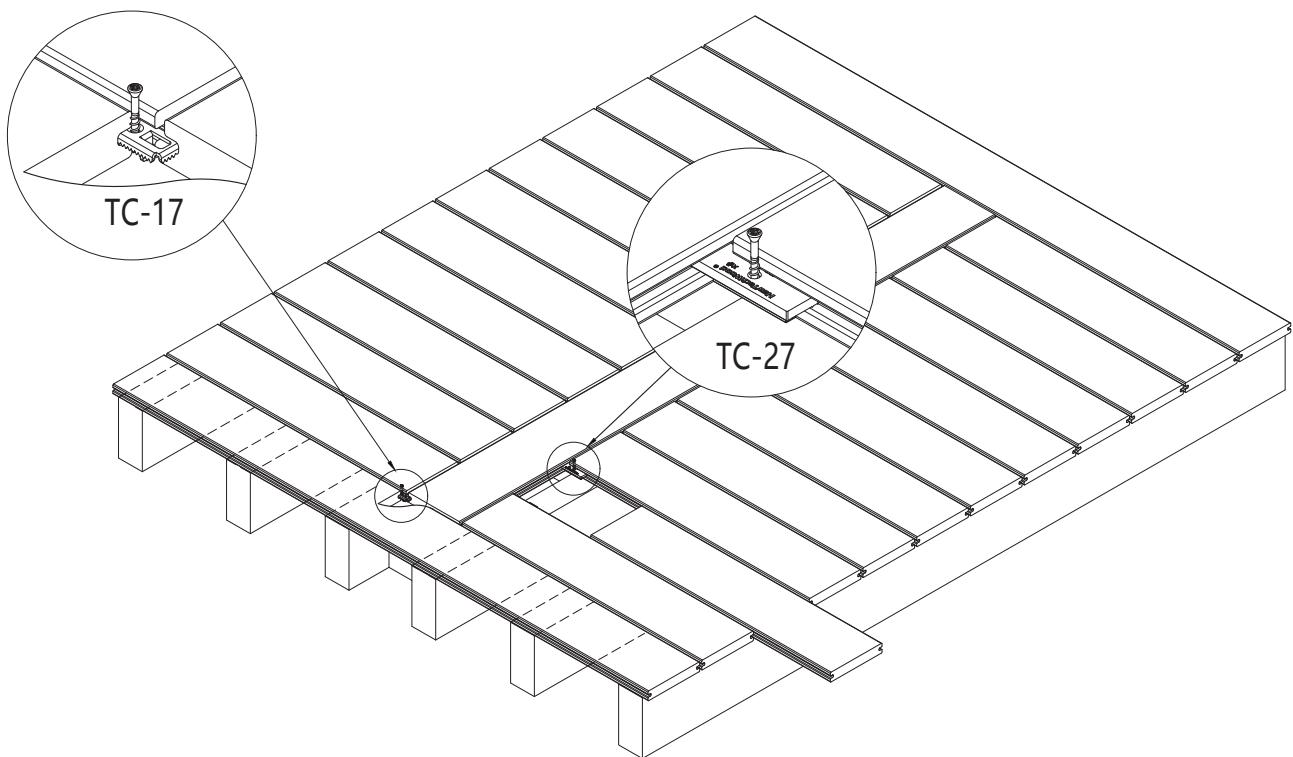


DIAGRAM 9

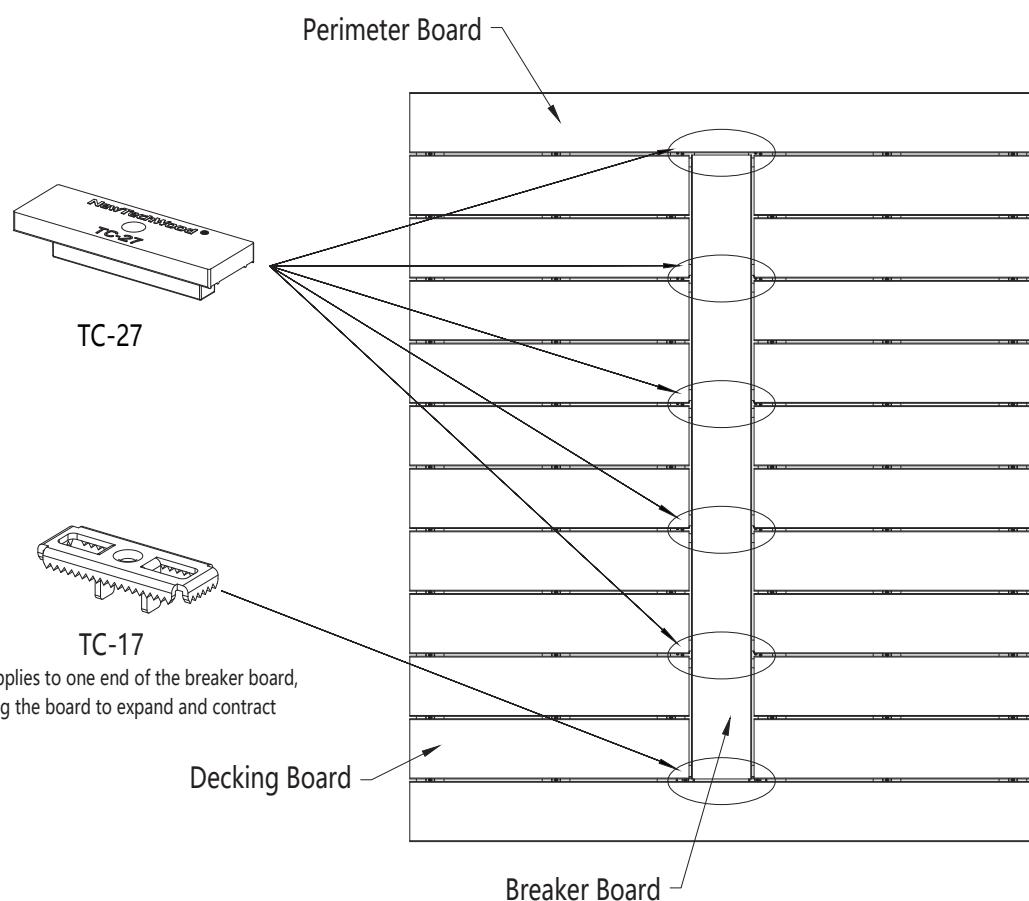


DIAGRAM 10

Stair Tread Installation

Review Diagram 11 and the table below with the maximum spacing from center to center for stair tread installation.

Stair treads built with NewTechWood must meet requirements by the major national building codes. Consult your local municipality for specific requirements.

A minimum of four (4) stringers are required.

Overhang on a stair tread should not exceed more than 5/8 inch.

Note: Stair treads should only be installed using solid profiles. Using any type of hollow board for stair treads will not be warrantied.

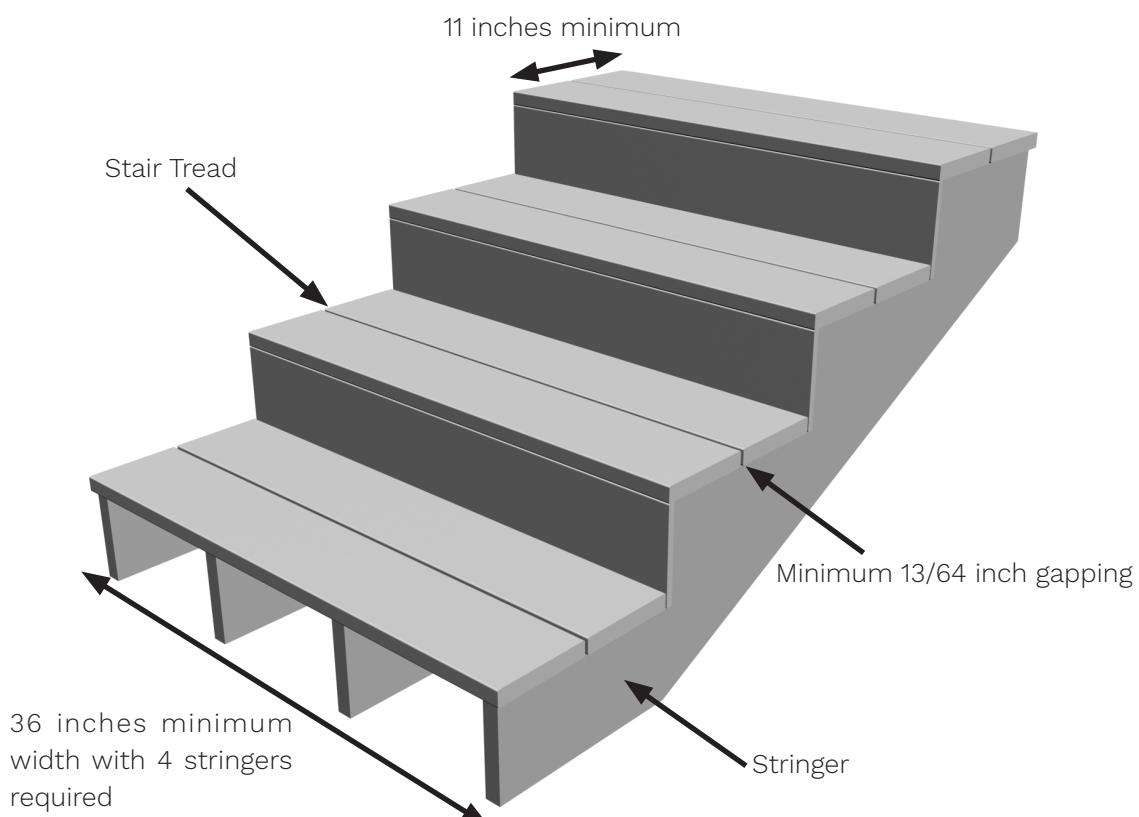


DIAGRAM 11

Maximum Spacing Center-to-Center on Stair Stringers and Bullnose

Profile	Dimensions	Spacing
US07 Solid Board	5.5 x 0.9 inches	12 inches
US01 Solid with Grooves	5.5 x 0.9 inches	12 inches
US53 Solid with Grooves	5.5 x 0.9 inches	12 inches

Decking Installation

Step1: Framing

First, determine the decking span, that is, how far apart your joists will be. The frame needs to be completely level before installing any boards.

Note:

Adequate spacing in the joists is required to keep the deck boards from bending. Please review the chart on page 6-7 of this installation guide to see what spacing is required for your profile.

When installing the deck, the first and last board of your project will need to use a starting accessory. Every other board will use the hidden fastener for its installation.

Step 2: Starting Accessory Installation

- 1 Pre-drill into the joist, then fix the starting accessory into the joist as shown in Diagram 19.

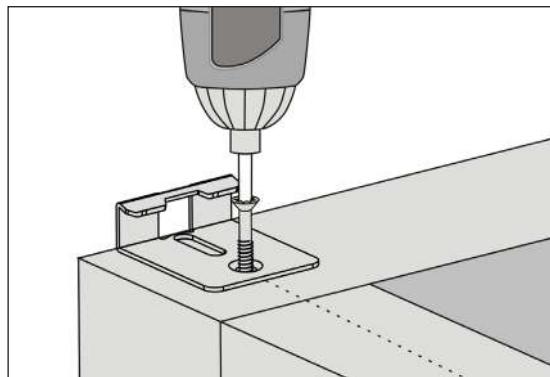


DIAGRAM 19

- 2 Then, take your first board and push it into the starting accessory as shown in Diagram 20.


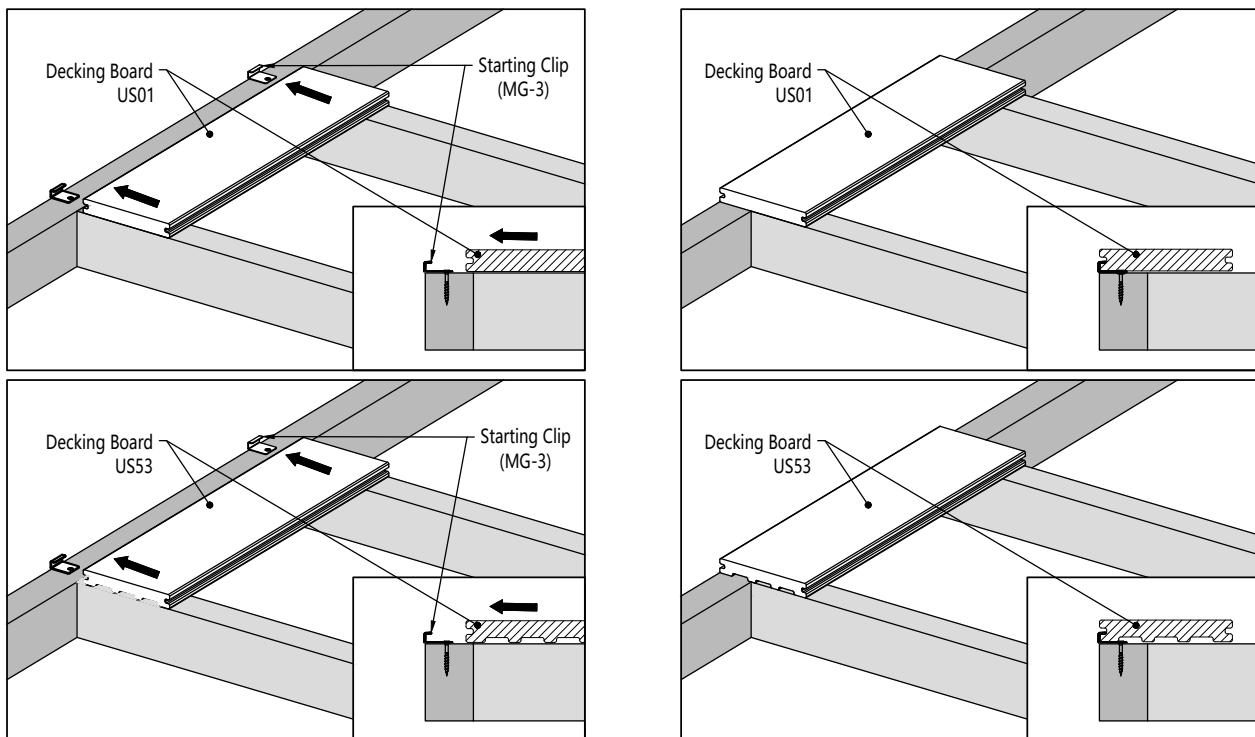



DIAGRAM 20

Step 3: Secure the decking boards with Locking Clip (TC-1) and T-Clip (TC-2)

- 1 First, slide the TC-1 and TC-2 clips into the grooves of the boards with screws facing up as shown in Diagram 21.

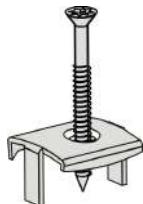

Locking Clip (TC-1)

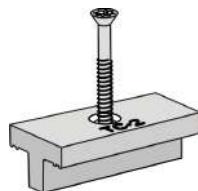

T-Clip (TC-2)

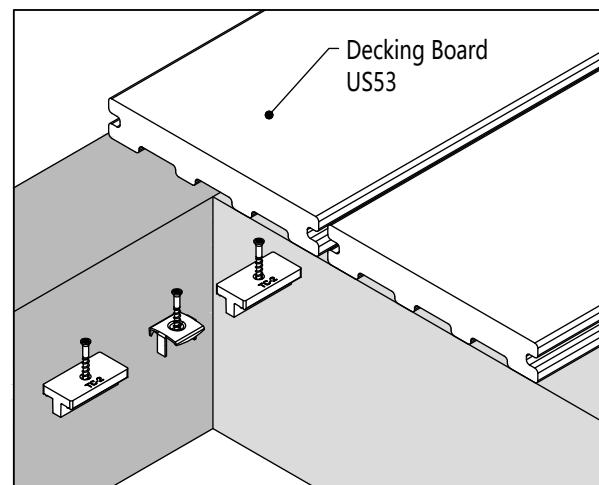
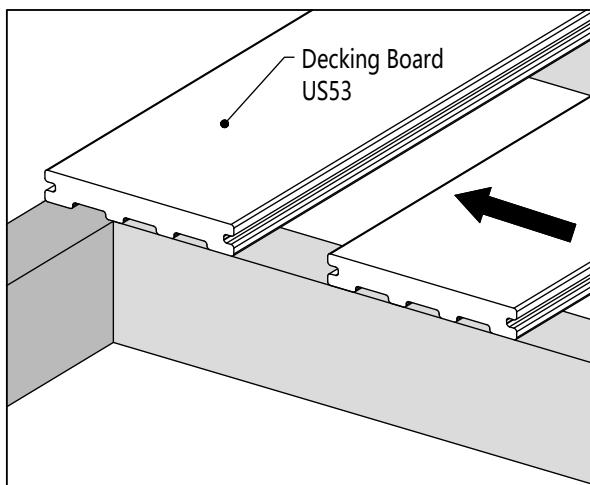
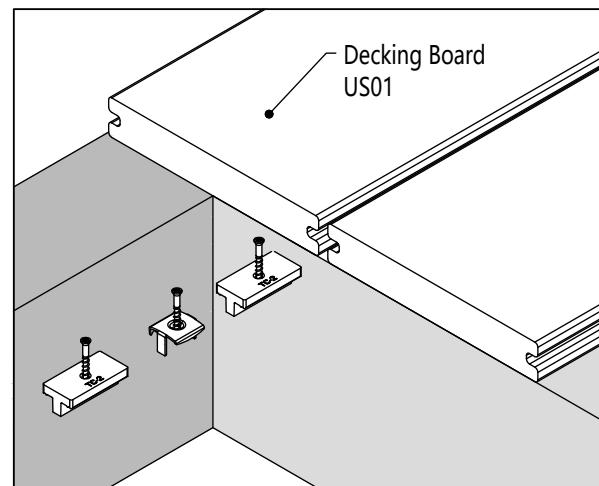
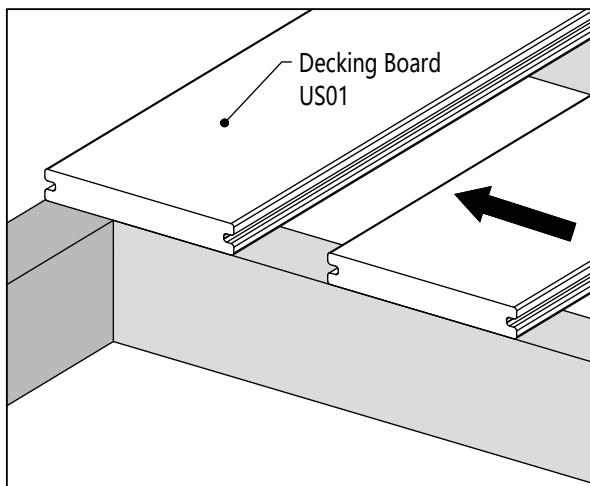
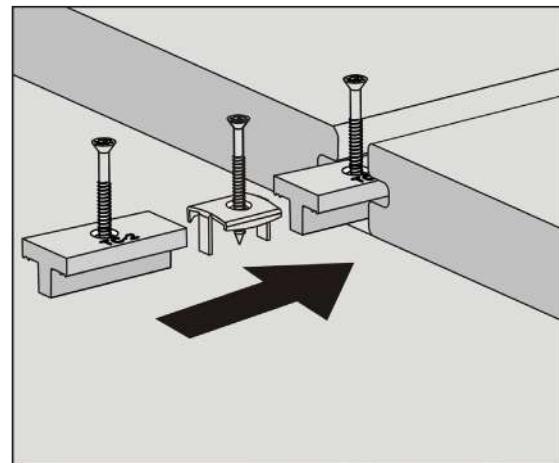


DIAGRAM 21

2 After getting all the TC-1 and TC-2 clips into position above each respective joist, begin to fasten them from above as shown in Diagram 22 and 23.

Note:

The fastest way of installation is by pushing all the boards together and then coming back and sliding the clips into the grooves from the side and then fixing from above.

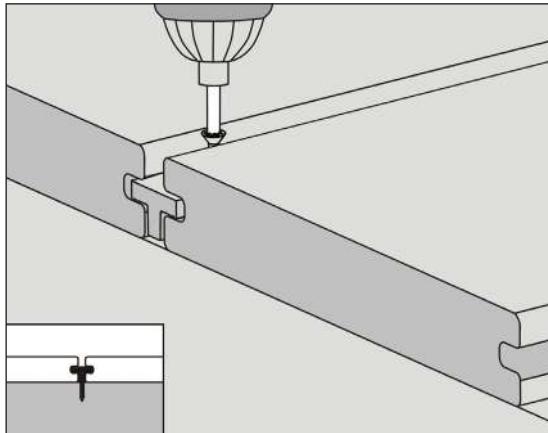


DIAGRAM 22

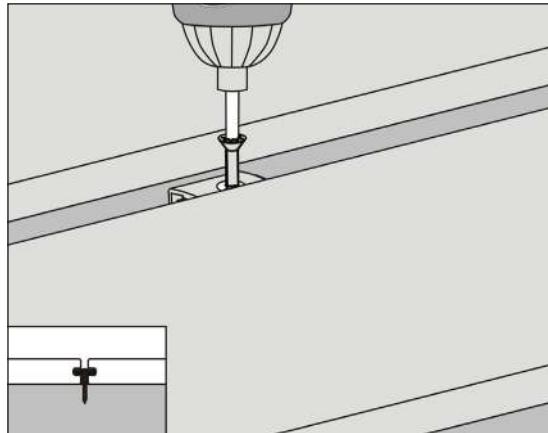


DIAGRAM 23

3 Repeat steps 1-2 until the deck is complete.

4 The final installed clips should look like Diagram 24.

Note:

The locking clip is in the middle of Diagram 24 to show the expansion and contraction is happening in both directions. For more information on how to install the locking clips and their placement, check page 8-9 of this installation guide.

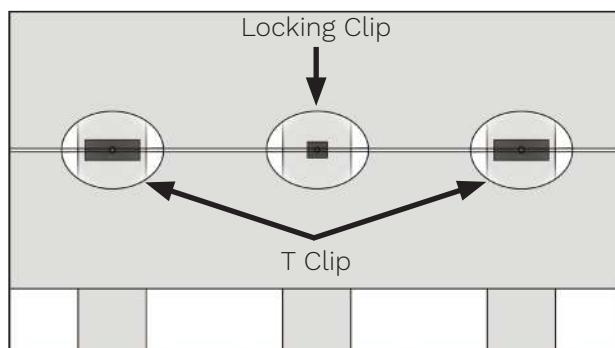


DIAGRAM 24

Fascia Board Installation

Installing against the width and length of decking

- 1 Fascia boards with a thickness of less than or equal to 25/64 inch need to be installed on 12 inches on centers to prevent warping or buckling. Fascia boards with a thickness greater than 10 mm can be installed on 16 inches on centers. All fascias need to use two screws 1" 1/2 away from the ends as shown in Diagram 31 regardless of the thickness.

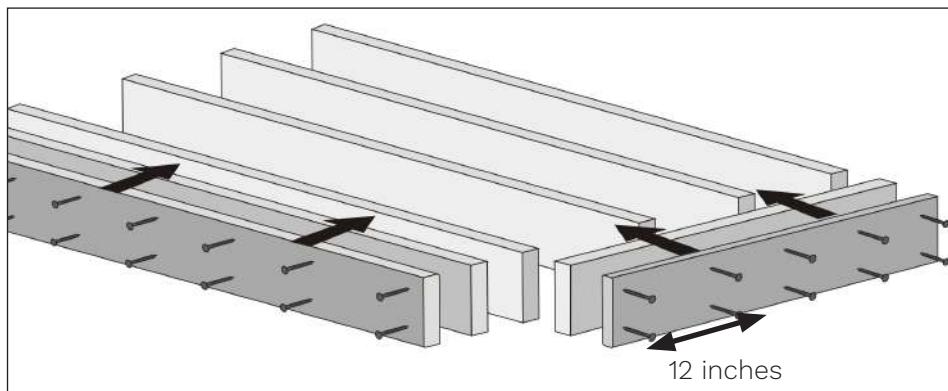


DIAGRAM 31

- 2 First, pre-drill the holes for the fascia board with the Deckfast Fascia Tool. The Deckfast Fascia Tool must be used in order to ensure the correct finish for the fascia boards. The tool can be found here at: <http://www.starbornindustries.com/deckfast-fascia-product>. The fascia boards must then be fixed using our composite fascia color head screws which are #9 1-7/8".
- 3 The fascia board will be installed into the block wood and through the joist.

Note: NEVER install the fascia by drilling into the decking ALWAYS install the fascia into the joist and ALWAYS pre-drill the fascia board.

Removing a Board

- 1 Start by unfastening all the clips from the joist on both sides of the board as shown below in Diagram 34.

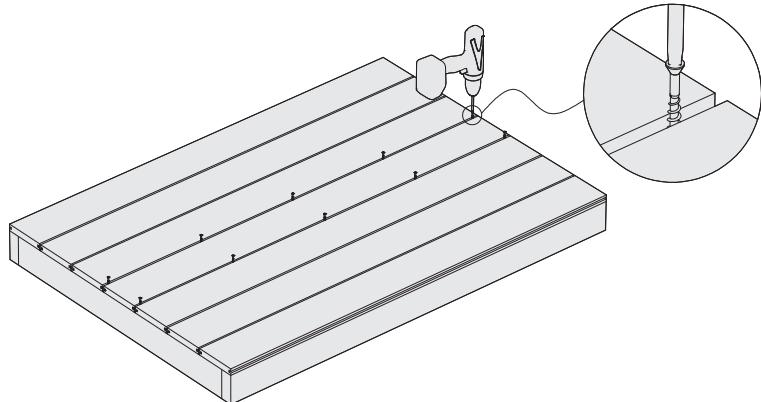


DIAGRAM 34

- 2 Next slide all clips out of the board as shown below in Diagram 35.

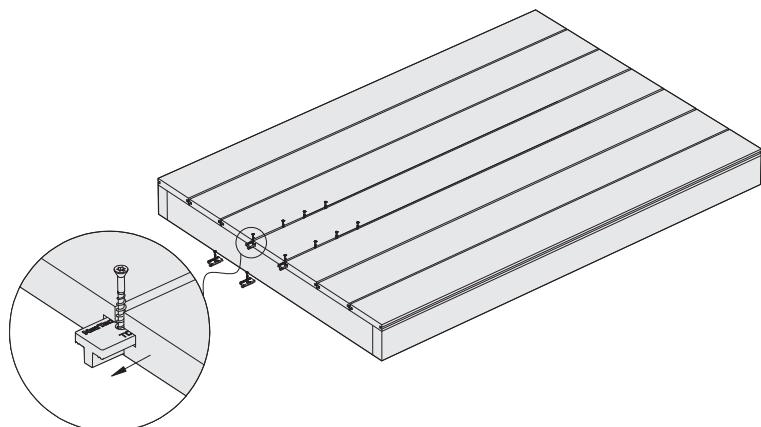


DIAGRAM 35

- 3 Next slide out the board as shown below in Diagram 36.

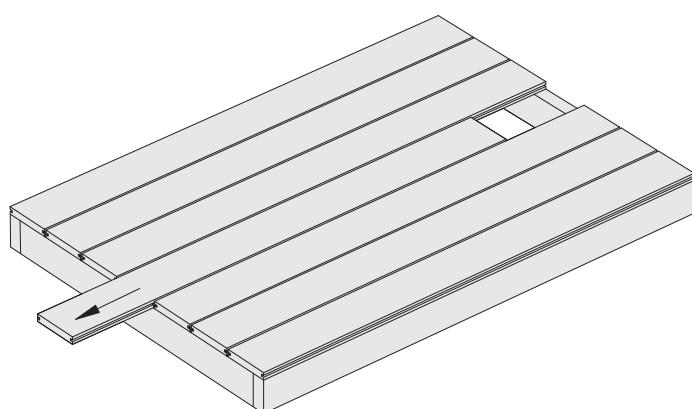


DIAGRAM 36

4 After the board is removed the new board can be inserted as shown below in Diagram 37 and 38.

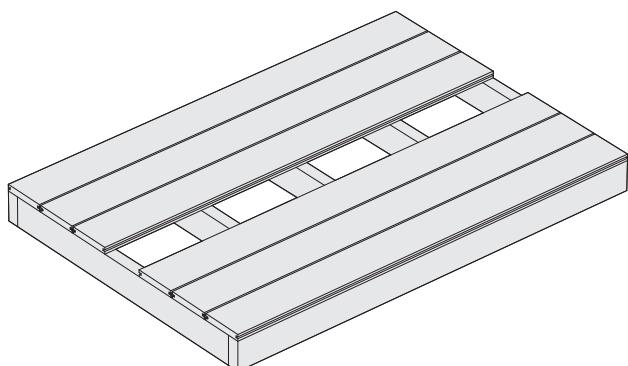


DIAGRAM 37

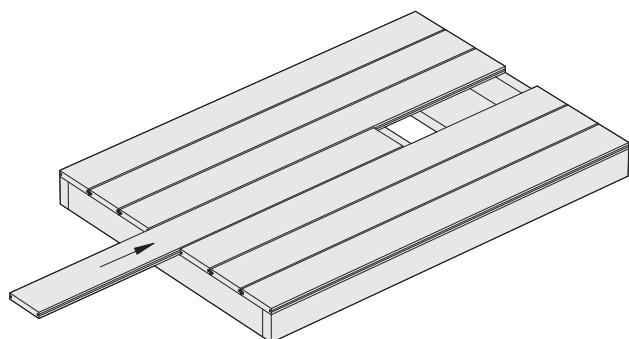


DIAGRAM 38

5 After the new board is in position insert the clips through the groove and into the correct position as shown in Diagram 39.

The clips should then be installed as shown in Diagram 40.

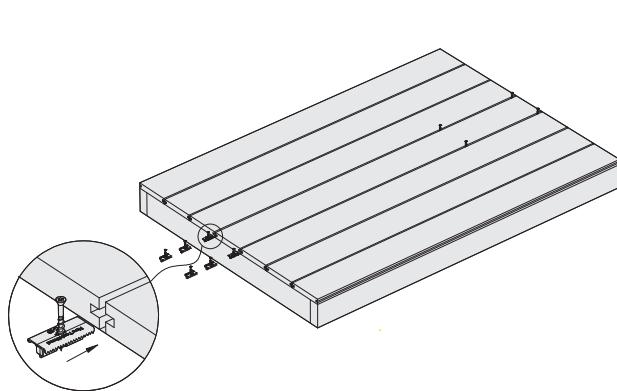


DIAGRAM 39

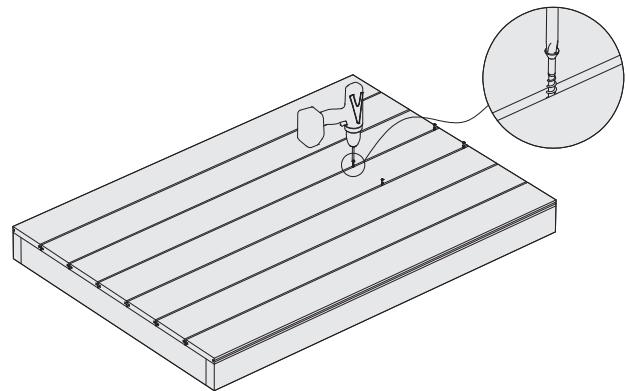


DIAGRAM 40



Decking Installation Guide

7.28.25 US

©2025 Newtechwood Corporation

NewTechWood® is a registered trademark of Newtechwood Corporation

To obtain a copy of the most current version of this installation guide, visit us online at www.newtechwood.com.

